


ARTFORMA



## User Manual of the Sensor Switch

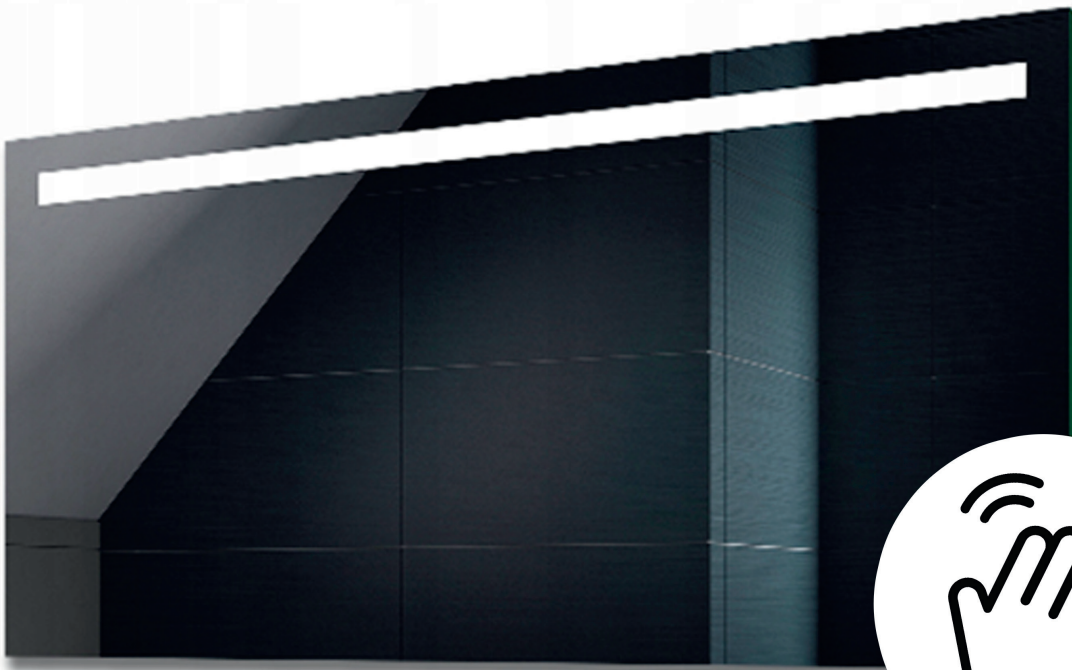

# Technical characteristics

The sensor switch is a device switching on the light of the mirror due to detection of the hand movement.

Specification	
<b>Current consumption:</b>	0.9 W
<b>Tightness class:</b>	IP20
<b>Power supply:</b>	12V DC
<b>Range:</b>	6cm



# Turning on and off the light

**1.** The sensor switch is normally located in the lower part of the mirror, on the right side. Wave your hand near this place and the LED light will turn on. Remember that the sensor detects the movement within the range of 6 cm from the edge of the mirror.



**2.** If you wave your hand once again, the LED light in the mirror will turn on automatically.






## Turning on and off the light

### WARNING!

Remember to mount the mirror (with particular attention paid to the edge in which the sensor is located) in a proper distance from the walls, bathroom furniture etc. The mirror should be separated from such surfaces by a distance of at least 20 cm. Otherwise, the sensor switch may not be able to work properly.

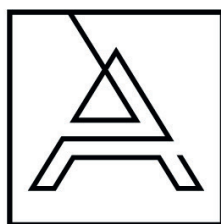

# ARTFORMA

FORAM Sp. z o.o. sp. k.  
Karpicko, ul. Jeziorna 3, 64-200 Wolsztyn

Mail EU: [info@artforma.eu](mailto:info@artforma.eu); Mail PL: [biuro@artforma.eu](mailto:biuro@artforma.eu)  
+48 68 422 73 65

**We work from Monday to Friday from: 9: 00 AM to 3. 00 PM**